



HOW TO USE THIS INSTALL GUIDE

- 1** Open the Bookmarks menu and find your vehicle OR scroll down until you find the install guide for your vehicle.
- 2** Print only the pages for your vehicle using the advanced options in the Print menu.
- 3** Install your Maestro RR according to the guide for your vehicle.

WARNING

Pressing the printer icon or "quick printing" this document will print all of the guides in this compilation.



INSTALL GUIDE FIAT 500L 2014-2017

RETAINS STEERING WHEEL CONTROLS, VEHICLE SETTINGS, AND MORE!



PRODUCTS REQUIRED

iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro CH3 Installation Harness

OPTIONAL ACCESSORIES

None

PROGRAMMED FIRMWARE

ADS-RR(SR)-CHR03E-DS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

 **1 866 427-2999**

 **support@idatalink.com**

 **maestro.idatalink.com/support**
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the CH3 T-harness and match the wire functions.

STEP 2

- Unplug the female WHITE 2 pin connector and plug it to the male RED connector of your CH3 T-harness. The male WHITE 2 pin connector will remain disconnected.
- Unplug the BLACK 2 pin connector of your CH3 T-harness. The female BLACK 2 pin connector will remain disconnected.
- Remove the factory radio.

STEP 3

- Plug the male BLACK 2 pin connector of your CH3 T-harness into the OBDII connector.
- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Connect the factory harness to the CH3 T-harness.

STEP 5

- Plug the aftermarket radio harnesses into the aftermarket radio.
- Plug the Data cable to the data port of the aftermarket radio.
- Insert the Audio cable into the iDataLink 3.5 mm audio jack of the aftermarket radio.

NOTE:

In Pioneer radios: plug Audio cable in auxiliary input of the radio.


STEP 6

- Connect all the harnesses to the Maestro RR module then test your installation.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

WIRING DIAGRAM

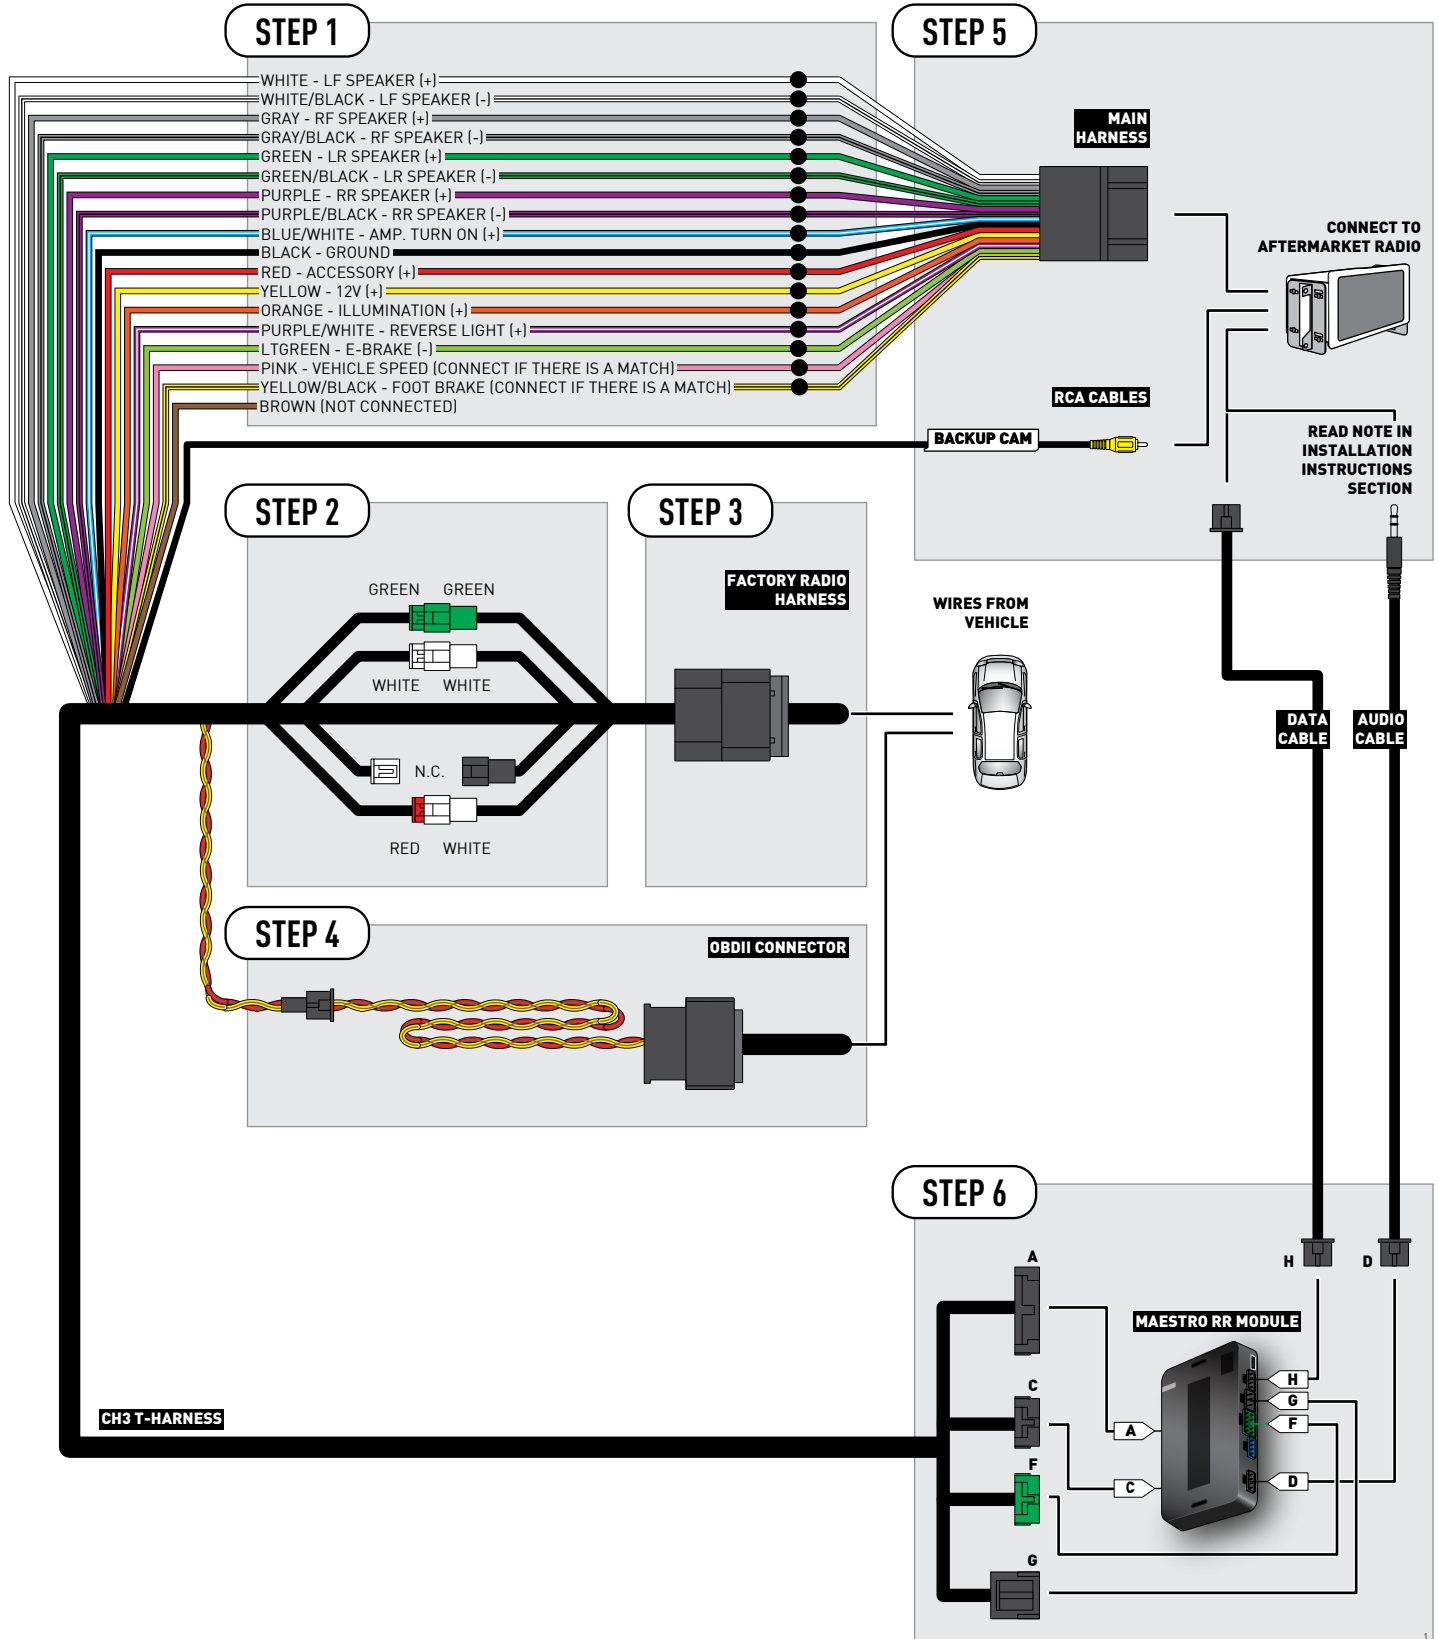

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink



INSTALL GUIDE RAM PROMASTER 2014-2017

RETAINS STEERING WHEEL CONTROLS, VEHICLE SETTINGS, AND MORE!



PRODUCTS REQUIRED

iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro CH3 Installation Harness

OPTIONAL ACCESSORIES

None

PROGRAMMED FIRMWARE

ADS-RR(SR)-CHR03E-DS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.


Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

 **1 866 427-2999**

 support@idatalink.com

 maestro.idatalink.com/support
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the CH3 T-harness and match the wire functions.

STEP 2

- Unplug the female WHITE 2 pin connector and plug it to the male RED connector of your CH3 T-harness. The male WHITE 2 pin connector will remain disconnected.
- Unplug the BLACK 2 pin connector of your CH3 T-harness. The female BLACK 2 pin connector will remain disconnected.
- Remove the factory radio.

STEP 3

- Plug the male BLACK 2 pin connector of your CH3 T-harness into the OBDII connector.
- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Connect the factory harness to the CH3 T-harness.

STEP 5

- Plug the aftermarket radio harnesses into the aftermarket radio.
- Plug the Data cable to the data port of the aftermarket radio.
- Insert the Audio cable into the iDataLink 3.5 mm audio jack of the aftermarket radio.

NOTE:

In Pioneer radios: plug Audio cable in auxiliary input of the radio.


STEP 6

- Connect all the harnesses to the Maestro RR module then test your installation.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

WIRING DIAGRAM

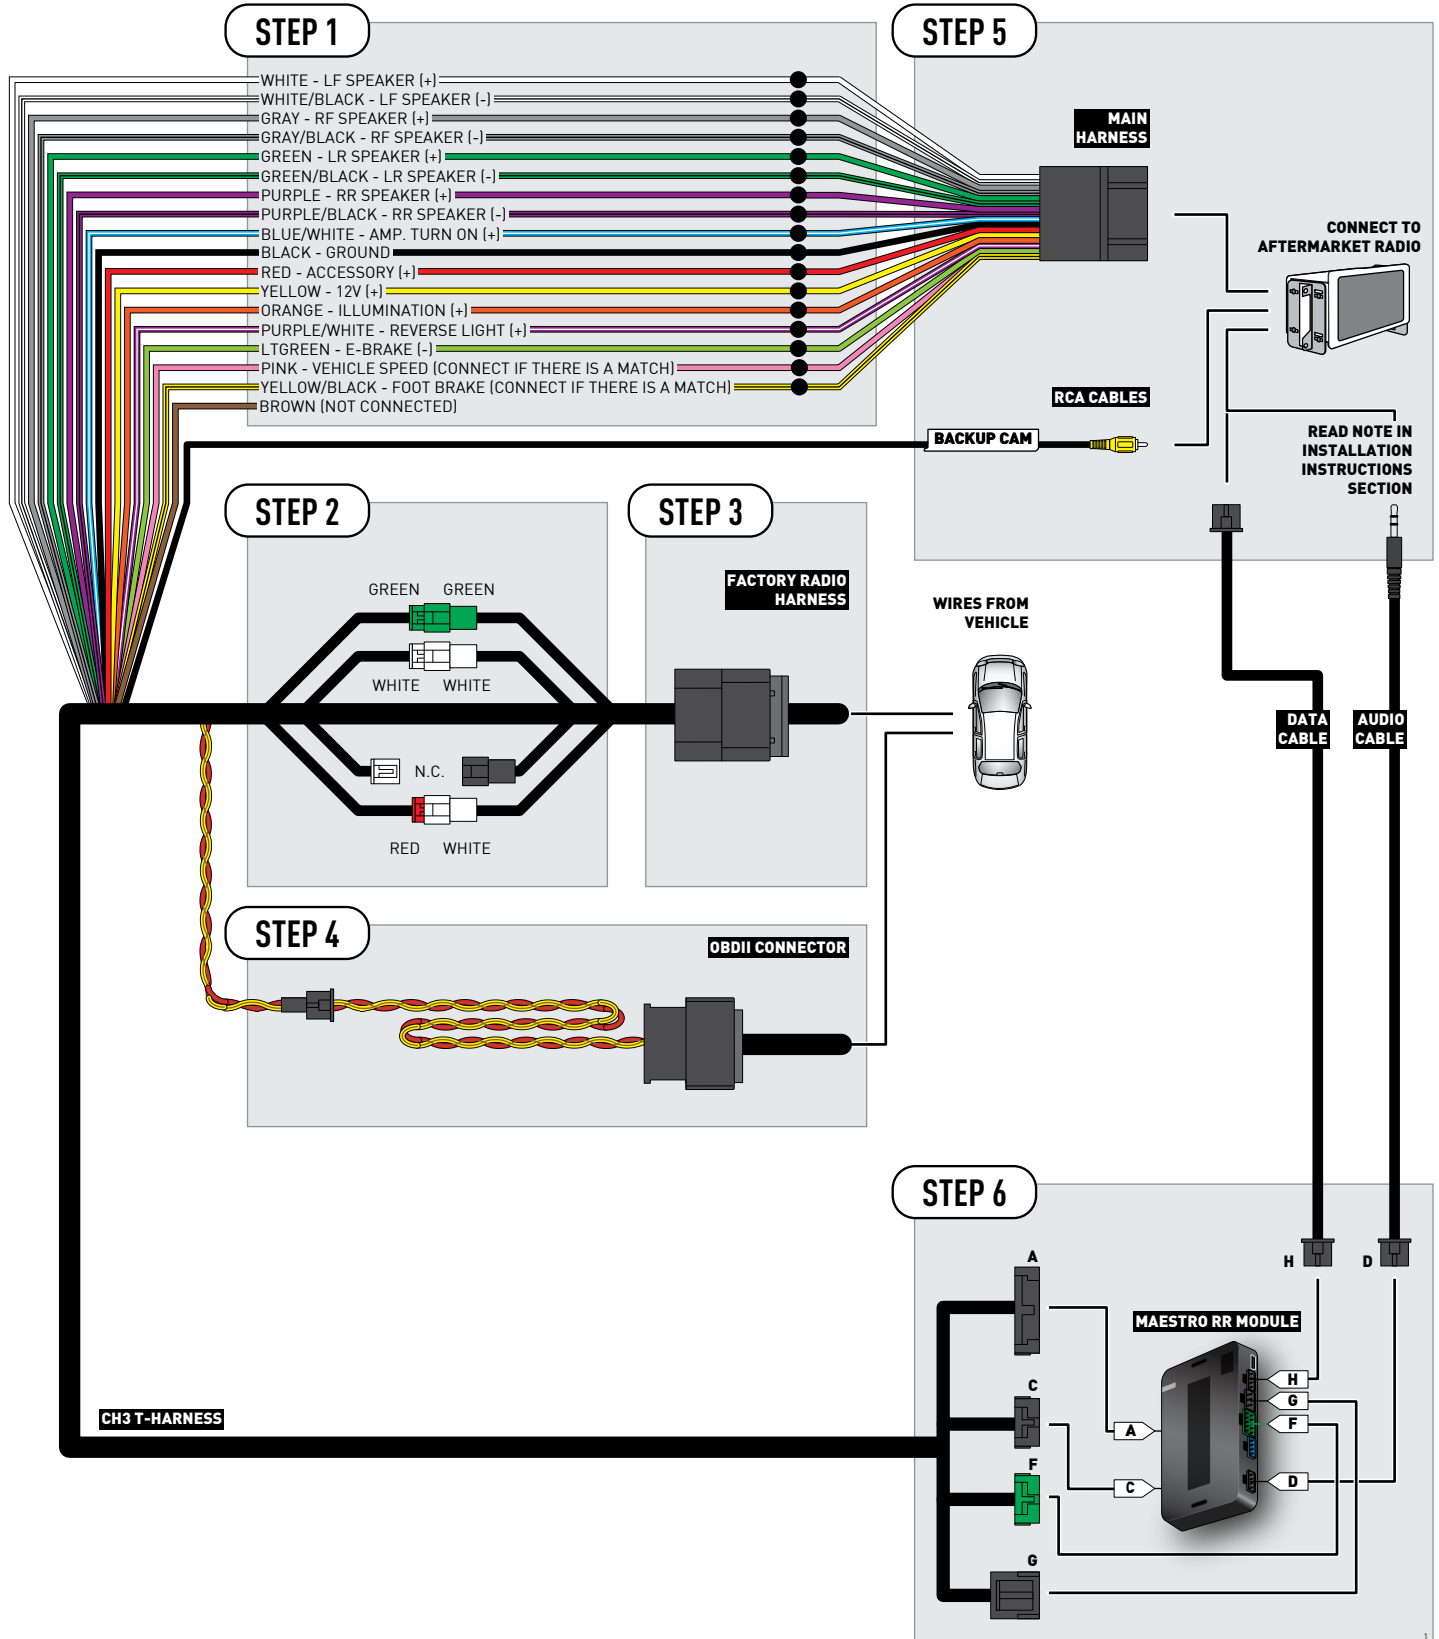

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink



INSTALL GUIDE RAM PROMASTER CITY 2015-2017

RETAINS STEERING WHEEL CONTROLS, VEHICLE SETTINGS, AND MORE!



PRODUCTS REQUIRED

iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro CH3 Installation Harness

OPTIONAL ACCESSORIES

None

PROGRAMMED FIRMWARE

ADS-RR(SR)-CHR03E-DS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.


Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

 **1 866 427-2999**

 **support@idatalink.com**

 **maestro.idatalink.com/support
www.12voltdata.com/forum**

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the CH3 T-harness and match the wire functions.

STEP 2

- Unplug the female WHITE 2 pin connector and plug it to the male RED connector of your CH3 T-harness. The male WHITE 2 pin connector will remain disconnected.
- Unplug the BLACK 2 pin connector of your CH3 T-harness. The female BLACK 2 pin connector will remain disconnected.
- Remove the factory radio.

STEP 3

- Plug the male BLACK 2 pin connector of your CH3 T-harness into the OBDII connector.
- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Connect the factory harness to the CH3 T-harness.

STEP 5

- Plug the aftermarket radio harnesses into the aftermarket radio.
- Plug the Data cable to the data port of the aftermarket radio.
- Insert the Audio cable into the iDataLink 3.5 mm audio jack of the aftermarket radio.

NOTE:

In Pioneer radios: plug Audio cable in auxiliary input of the radio.


STEP 6

- Connect all the harnesses to the Maestro RR module then test your installation.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

WIRING DIAGRAM

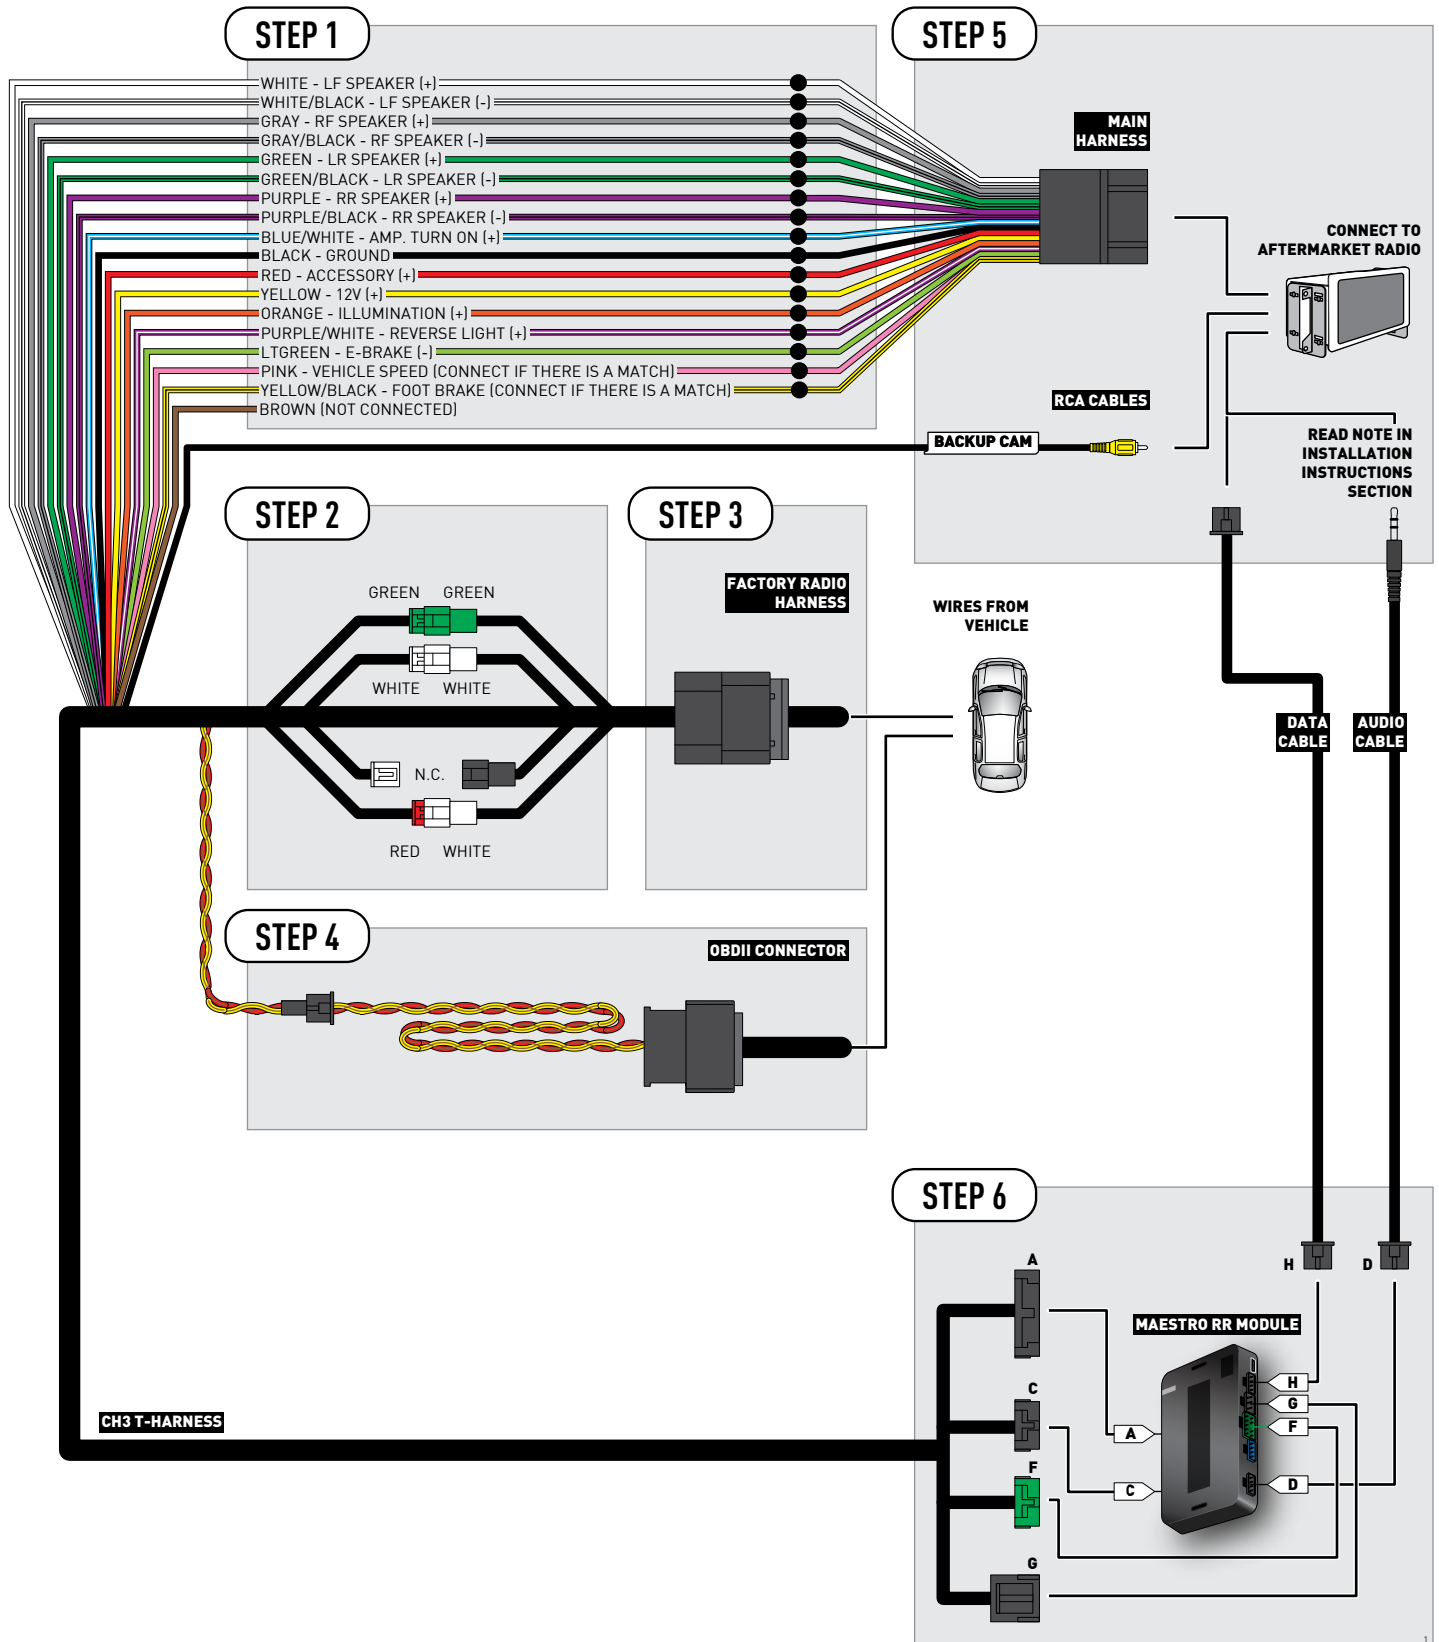

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink