SELECT VEHICLE
PRINT PAGES NEEDED

iDatalink maestro RR

HOW TO USE THIS INSTALL GUIDE

1. Open the Bookmarks menu and find your vehicle OR scroll down until you find the install guide for your vehicle.
2. Print only the pages for your vehicle using the advanced options in the Print menu.
3. Install your Maestro RR according to the guide for your vehicle.

WARNING

Pressing the printer icon or "quick printing" this document will print all of the guides in this compilation.

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

INSTALL GUIDE
FORD CMAX
WITH 4.3" MYFORD SCREEN
2013-2016

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

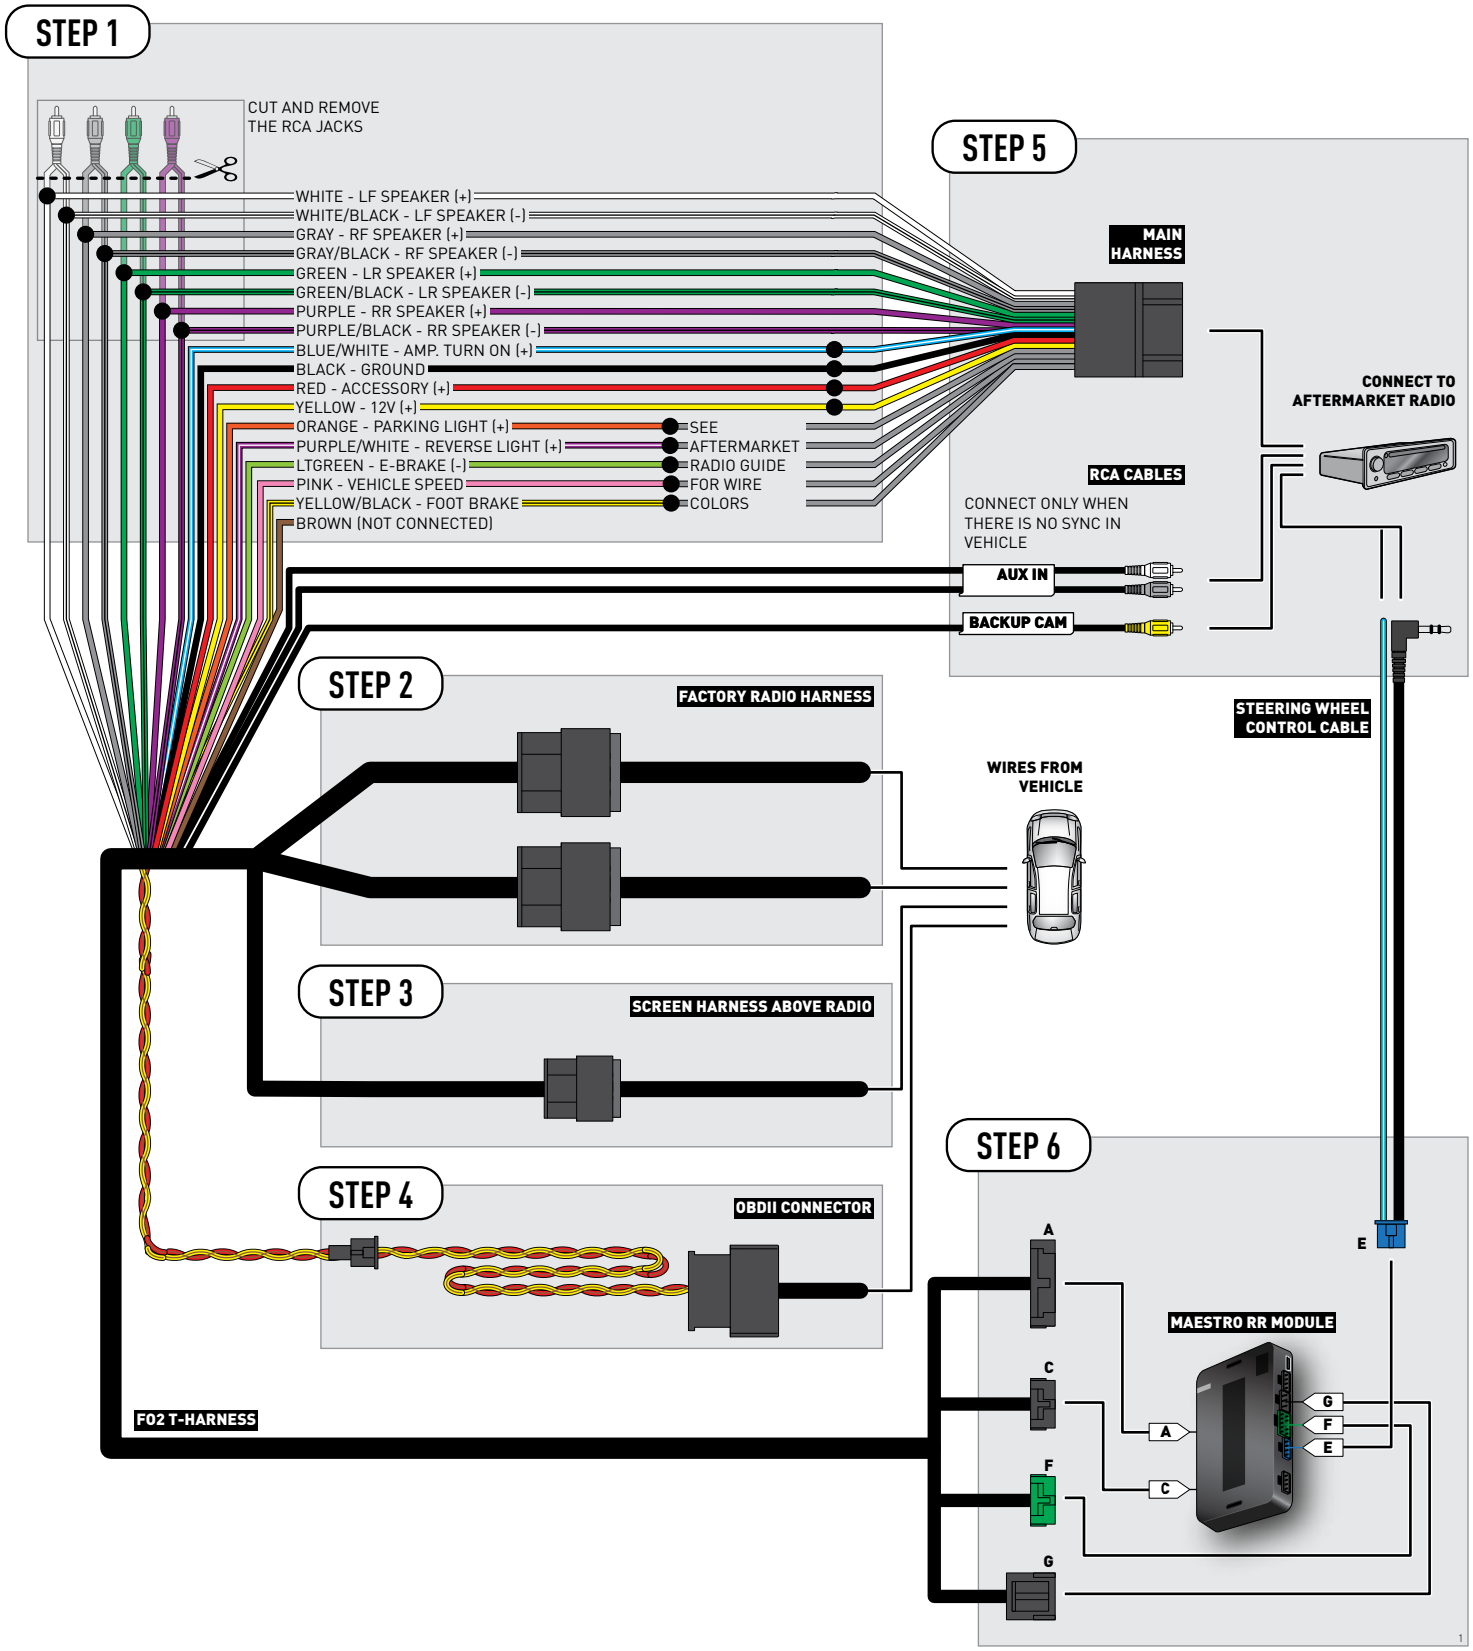

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD EDGE
WITH 4.3" MYFORD SCREEN
2011-2014

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions 3

Wiring Diagram 4

Radio Wire Reference Chart 5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

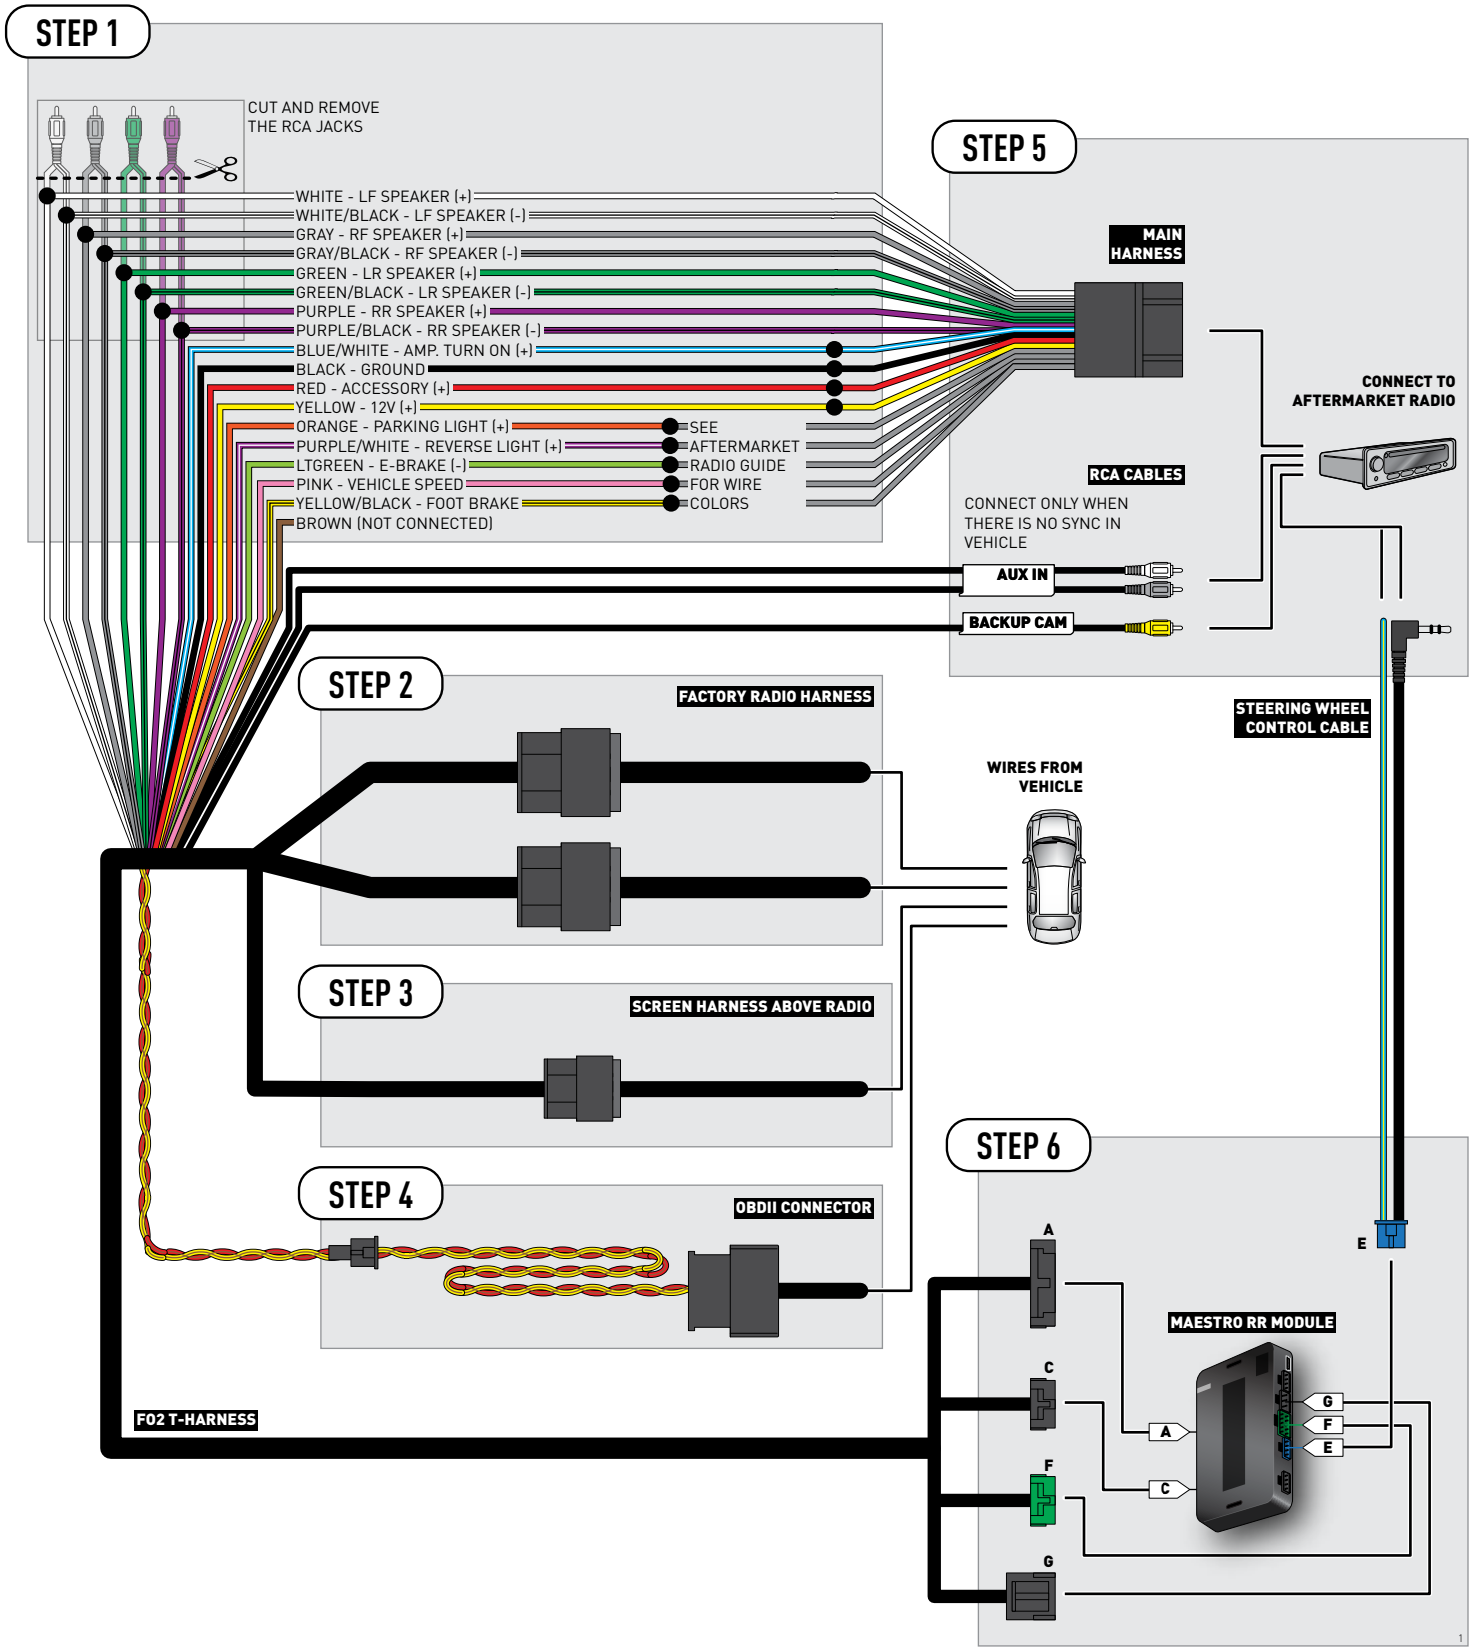

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD ESCAPE
WITH 4.3" MYFORD SCREEN
2013-2015

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

Automotive Data Solutions Inc. © 2017

WIRING DIAGRAM

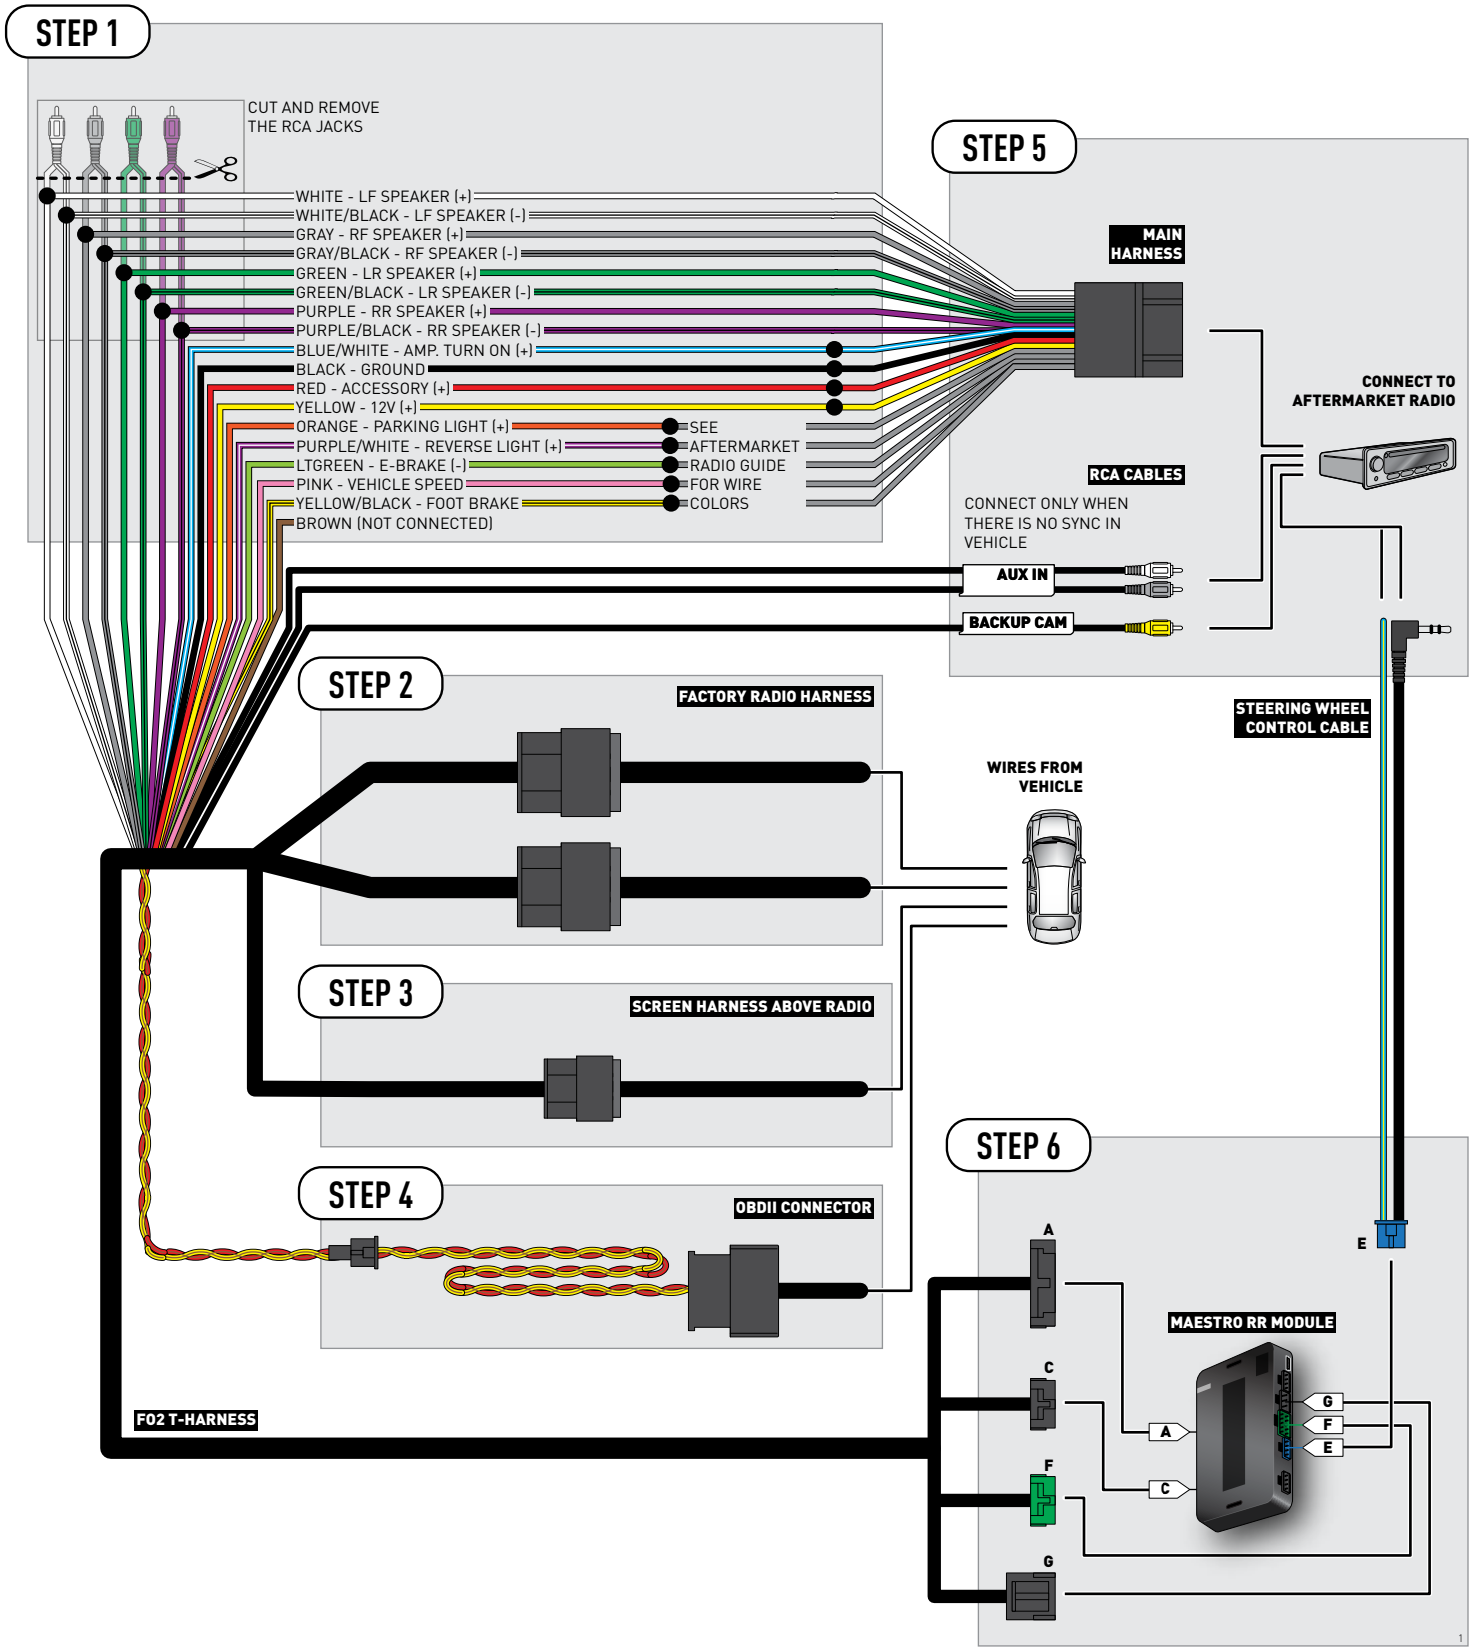

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD EXPLORER
WITH 4.3" MYFORD SCREEN
2011-2015

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

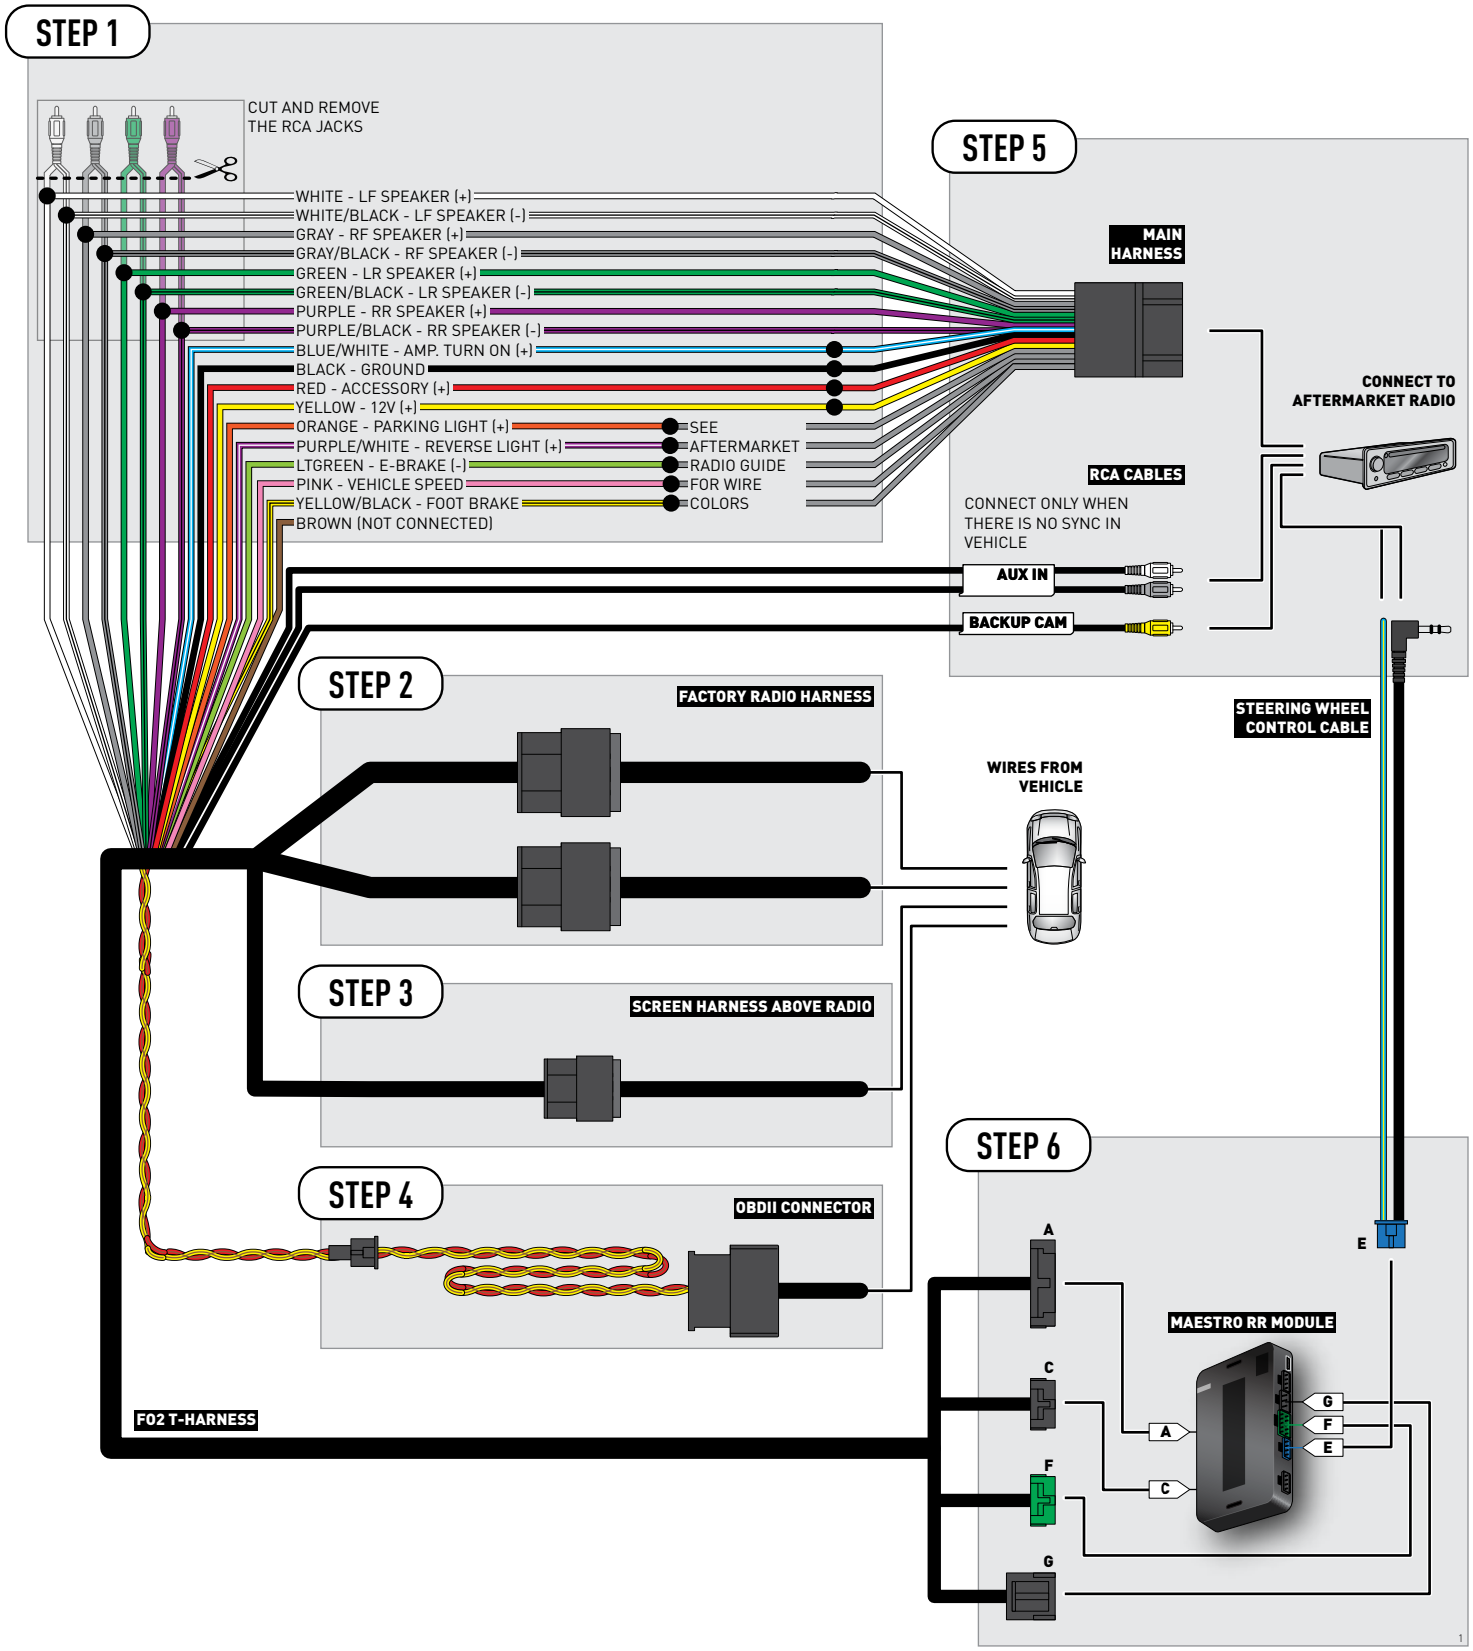

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD F150
WITH 4.3" MYFORD SCREEN
2013-2014

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

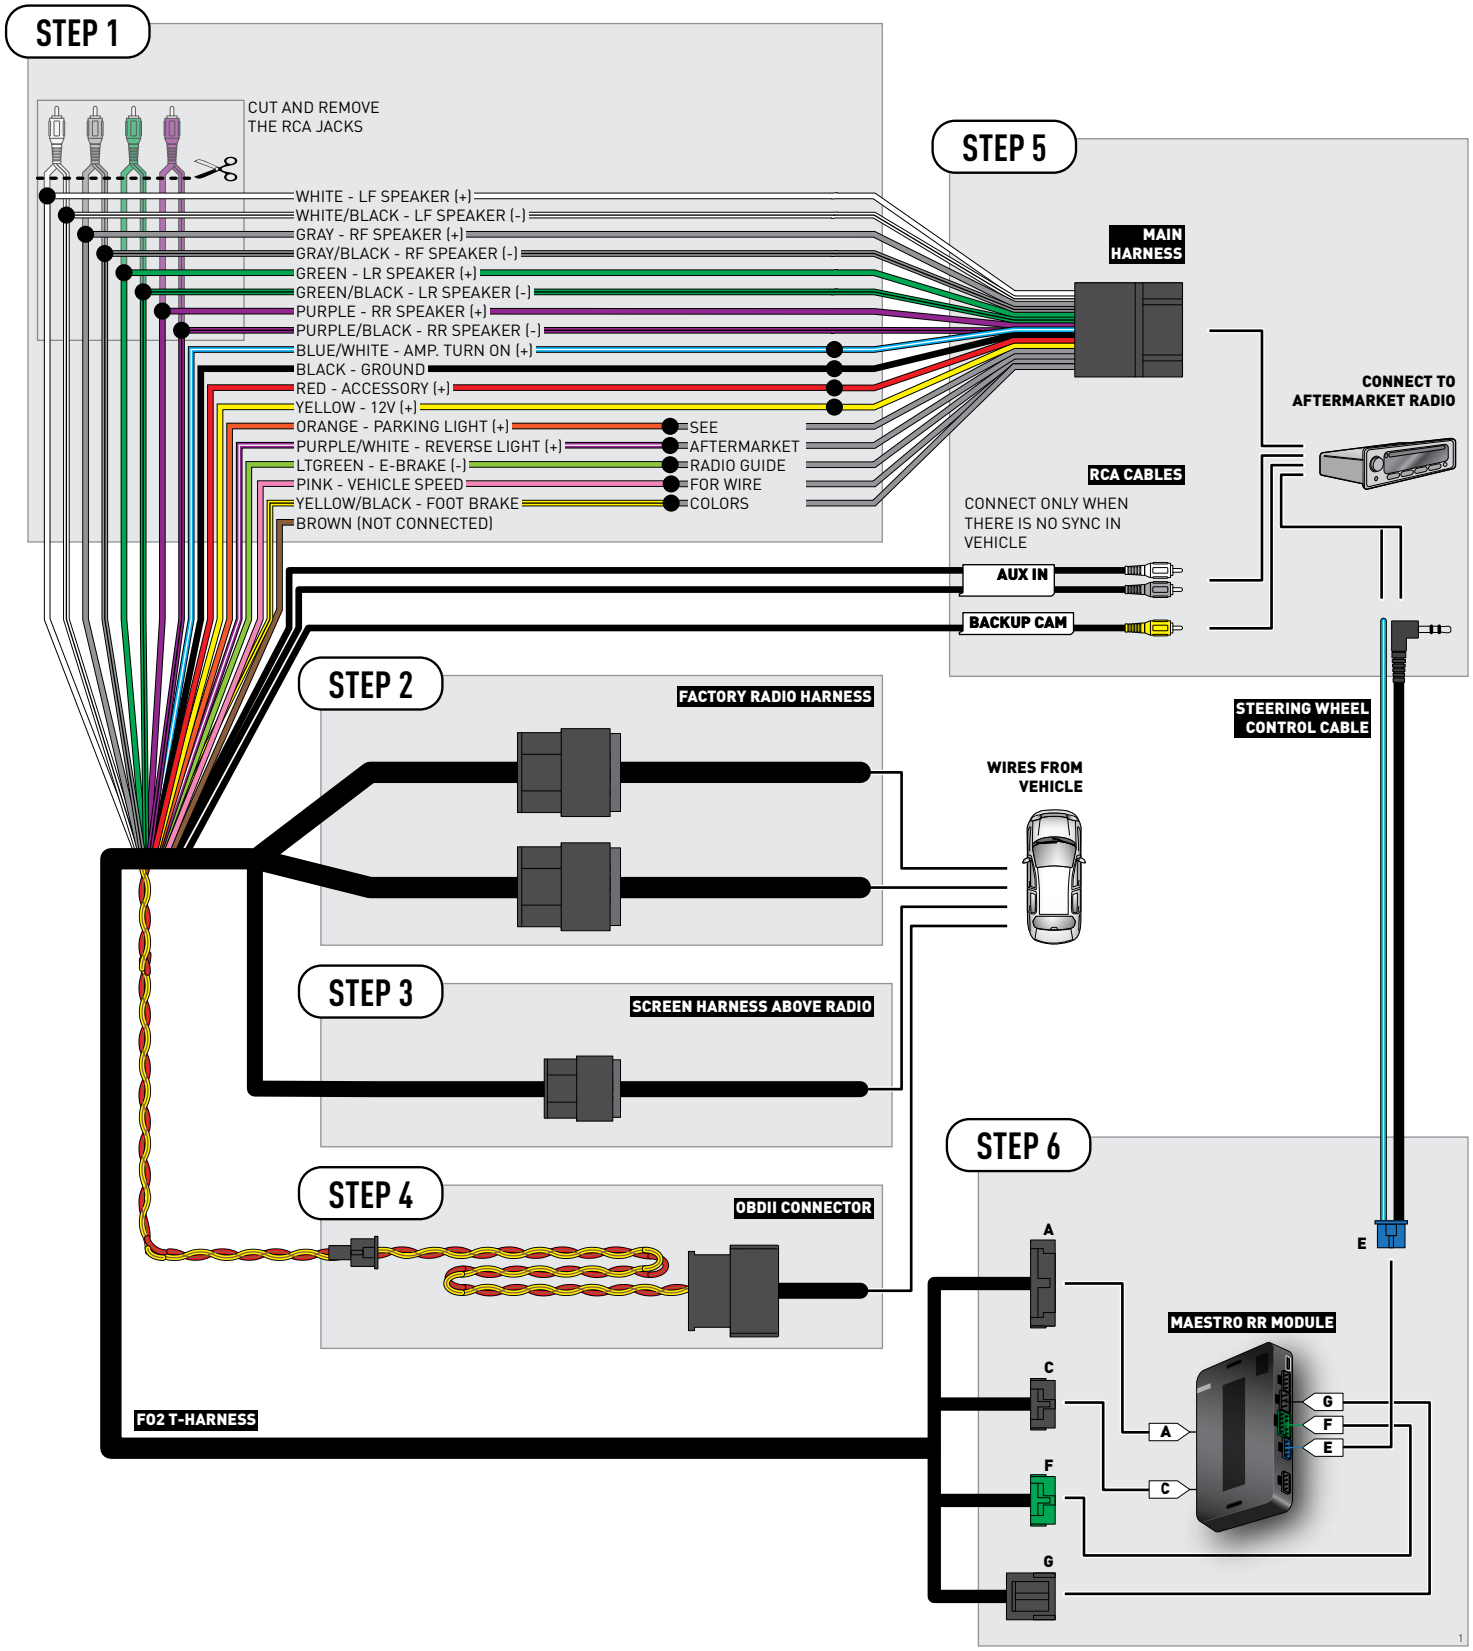

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD FLEX
WITH 4.3" MYFORD SCREEN
2013-2014

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

Automotive Data Solutions Inc. © 2017

WIRING DIAGRAM

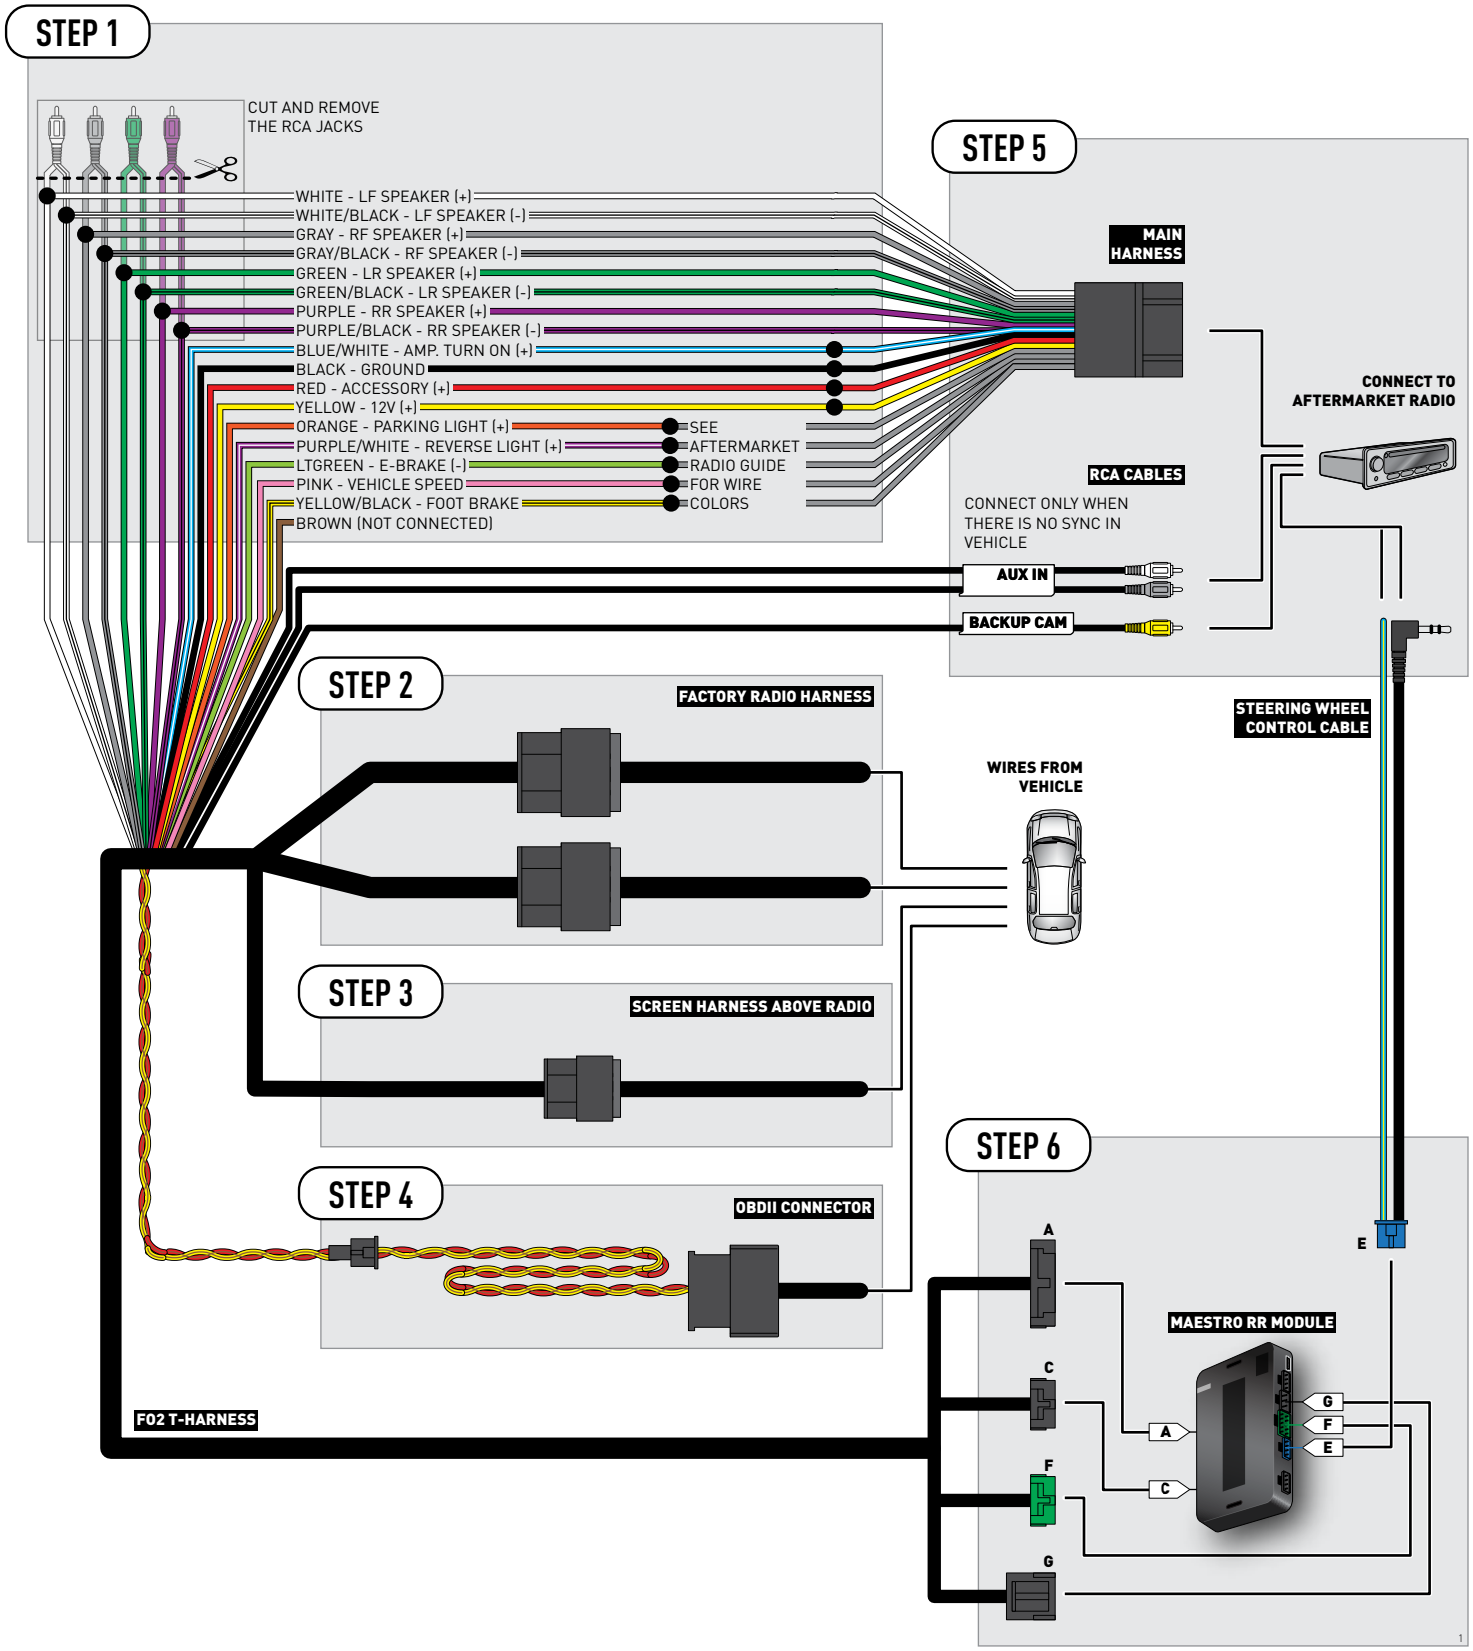

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD FOCUS
WITH 4.3" MYFORD SCREEN
2012-2014

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

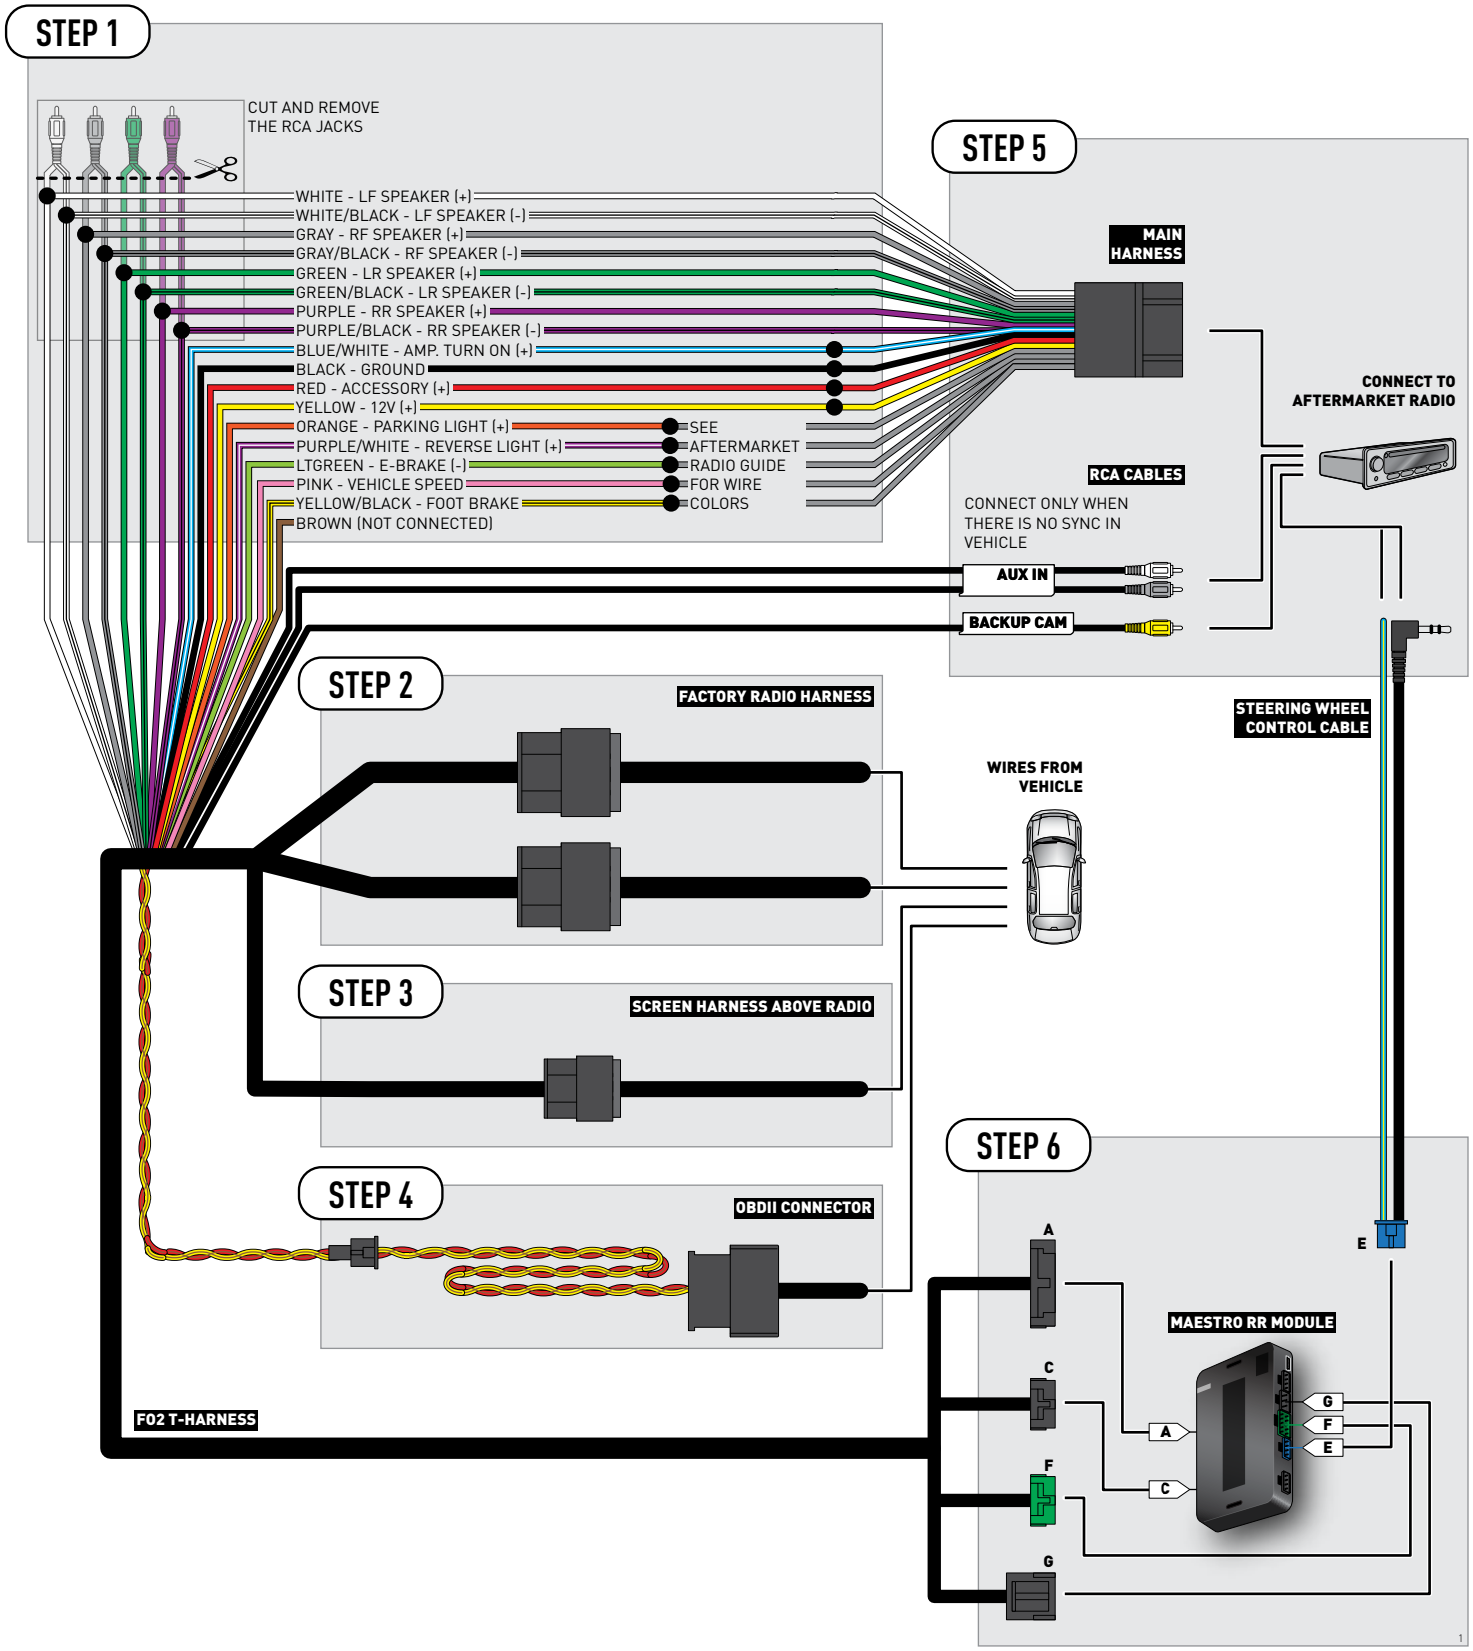

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD TAURUS
WITH 4.3" MYFORD SCREEN
2013-2014

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

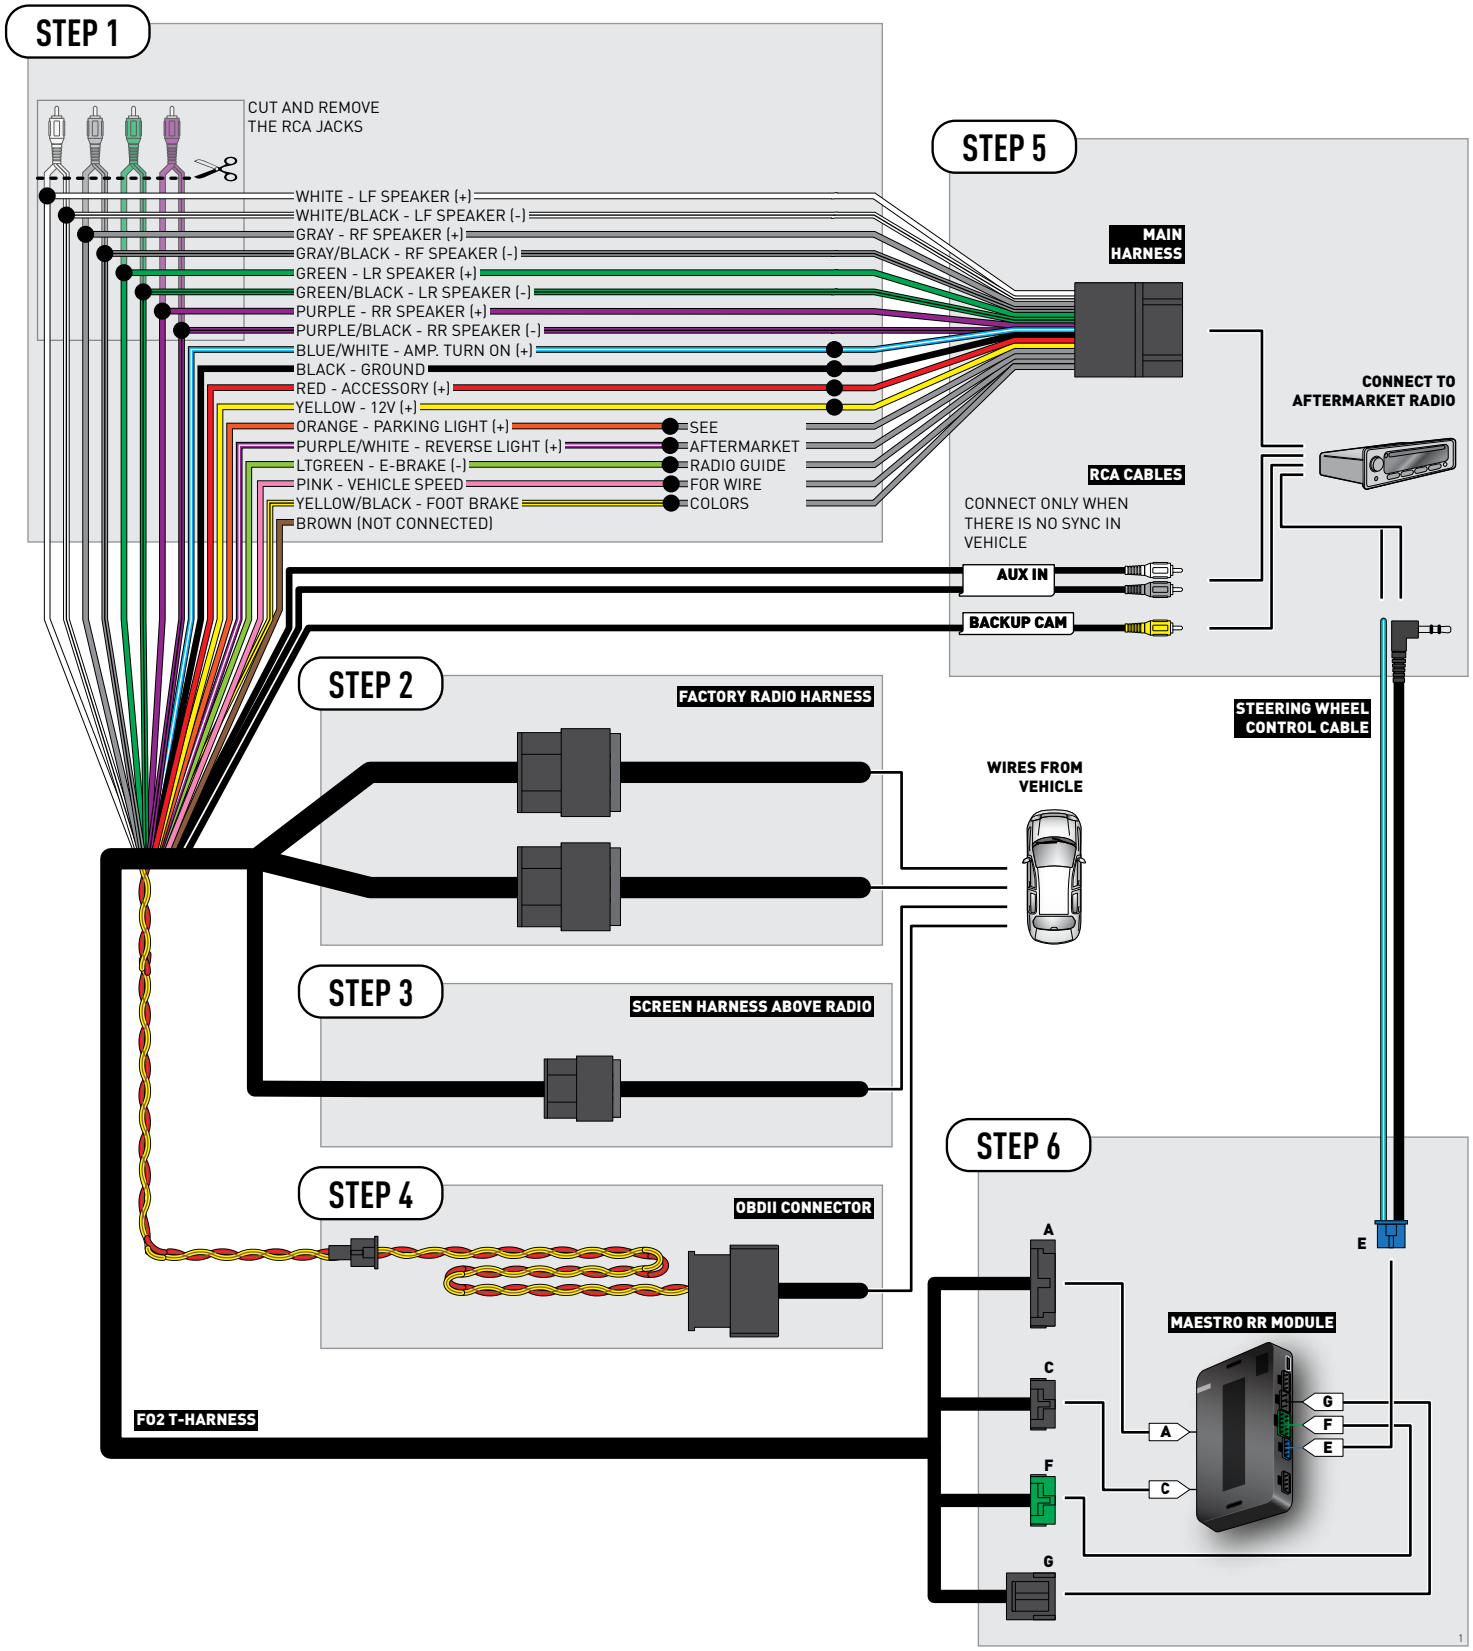

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD TRANSIT CONNECT
WITH 4.3" MYFORD SCREEN
2014-2016

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

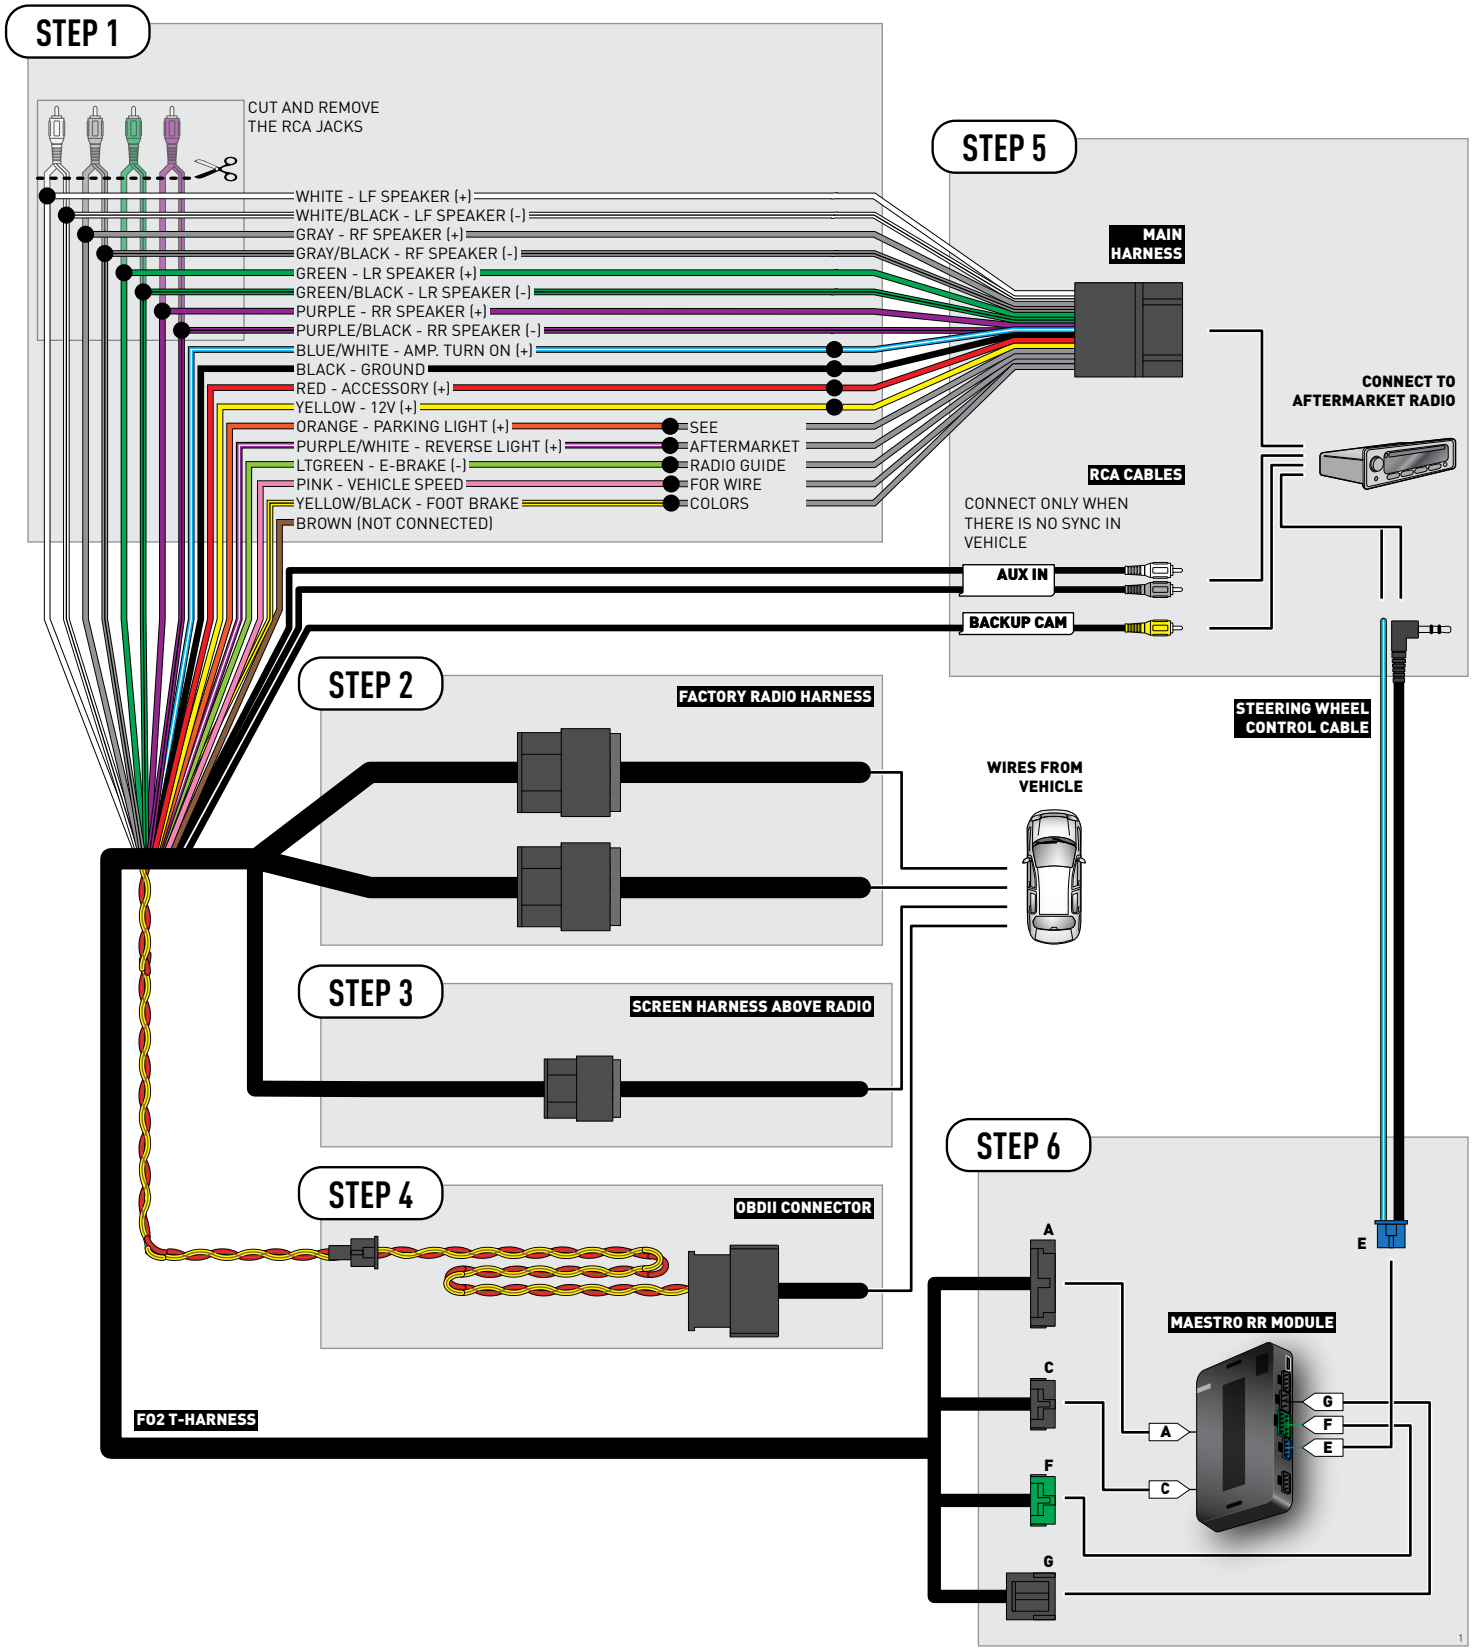

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink

INSTALL GUIDE
FORD TRANSIT
WITH 4.3" MYFORD SCREEN
2015-2016

RETAINS STEERING WHEEL CONTROLS, FACTORY AMPLIFIER AND MORE!



PRODUCTS REQUIRED
iDatalink Maestro RR Radio Replacement Interface
iDatalink Maestro FO2 Installation Harness

OPTIONAL ACCESSORIES
None

PROGRAMMED FIRMWARE
ADS-RR(SR)-FOR02-AS

NOTICE: Automotive Data Solutions Inc. (ADS) recommends having this installation performed by a certified technician. Logos and trademarks used here in are the properties of their respective owners.

WELCOME

Congratulations on the purchase of your iDatalink Maestro RR Radio replacement solution. You are now a few simple steps away from enjoying your new car radio with enhanced features.

Before starting your installation, please ensure that your iDatalink Maestro module is programmed with the correct firmware and that you carefully review the Installation Diagram and Vehicle Wire Reference Chart.

Please note that Maestro RR will only retain functionalities that were originally available in the vehicle.

DURING INSTALLATION

Installation Instructions	3
Wiring Diagram	4
Radio Wire Reference Chart	5

NEED HELP?

1 866 427-2999

support@idatalink.com

maestro.idatalink.com/support
www.12voltdata.com/forum

INSTALLATION INSTRUCTIONS

STEP 1

- Unbox the aftermarket radio and locate its main harness.
- Connect the wires shown on the next page from aftermarket radio main harness to the F02 T-harness and match the wire functions.

STEP 2

- Connect the factory harness to the F02 T-harness.

STEP 3

- Connect the screen harness to the F02 T-harness.

STEP 3

- Plug the OBDII connector into the OBDII of the vehicle.

STEP 4

- Plug the aftermarket radio harnesses into the aftermarket radio.

STEP 5

- Connect the 4 pin blue plug to the maestro and the other end to he aftermarket radio. For Kenwood and JVC use the BLUE/YELLOW wire, all other radios use the 3.5 jack.
- Connect the auxiliary and backup camera RCA cables into the aftermarket radio (if equipped).

STEP 6

- Connect all the harnesses to the Maestro RR module then proceed to module setup.

The module is now ready to be used.

Insert the aftermarket radio in the dashboard housing and test all the functionalities.


Reassemble the dashboard carefully.

TROUBLESHOOTING TIPS:

- To reset the module back its factory settings, turn the key to the OFF position then disconnect all connectors from the module. Press and hold the module's programming button and connect all the connectors back to the module. Wait, the module's LED will flash RED rapidly (this may take up to 10 seconds). Release the programming button. Wait, the LED will turn solid GREEN for 2 seconds.
- For technical assistance call 1-866-427-2999 or e-mail "support@idatalink.com". Visit us at "maestro.idatalink.com/support" and "www.12voltdata.com/forum/"

1

WIRING DIAGRAM

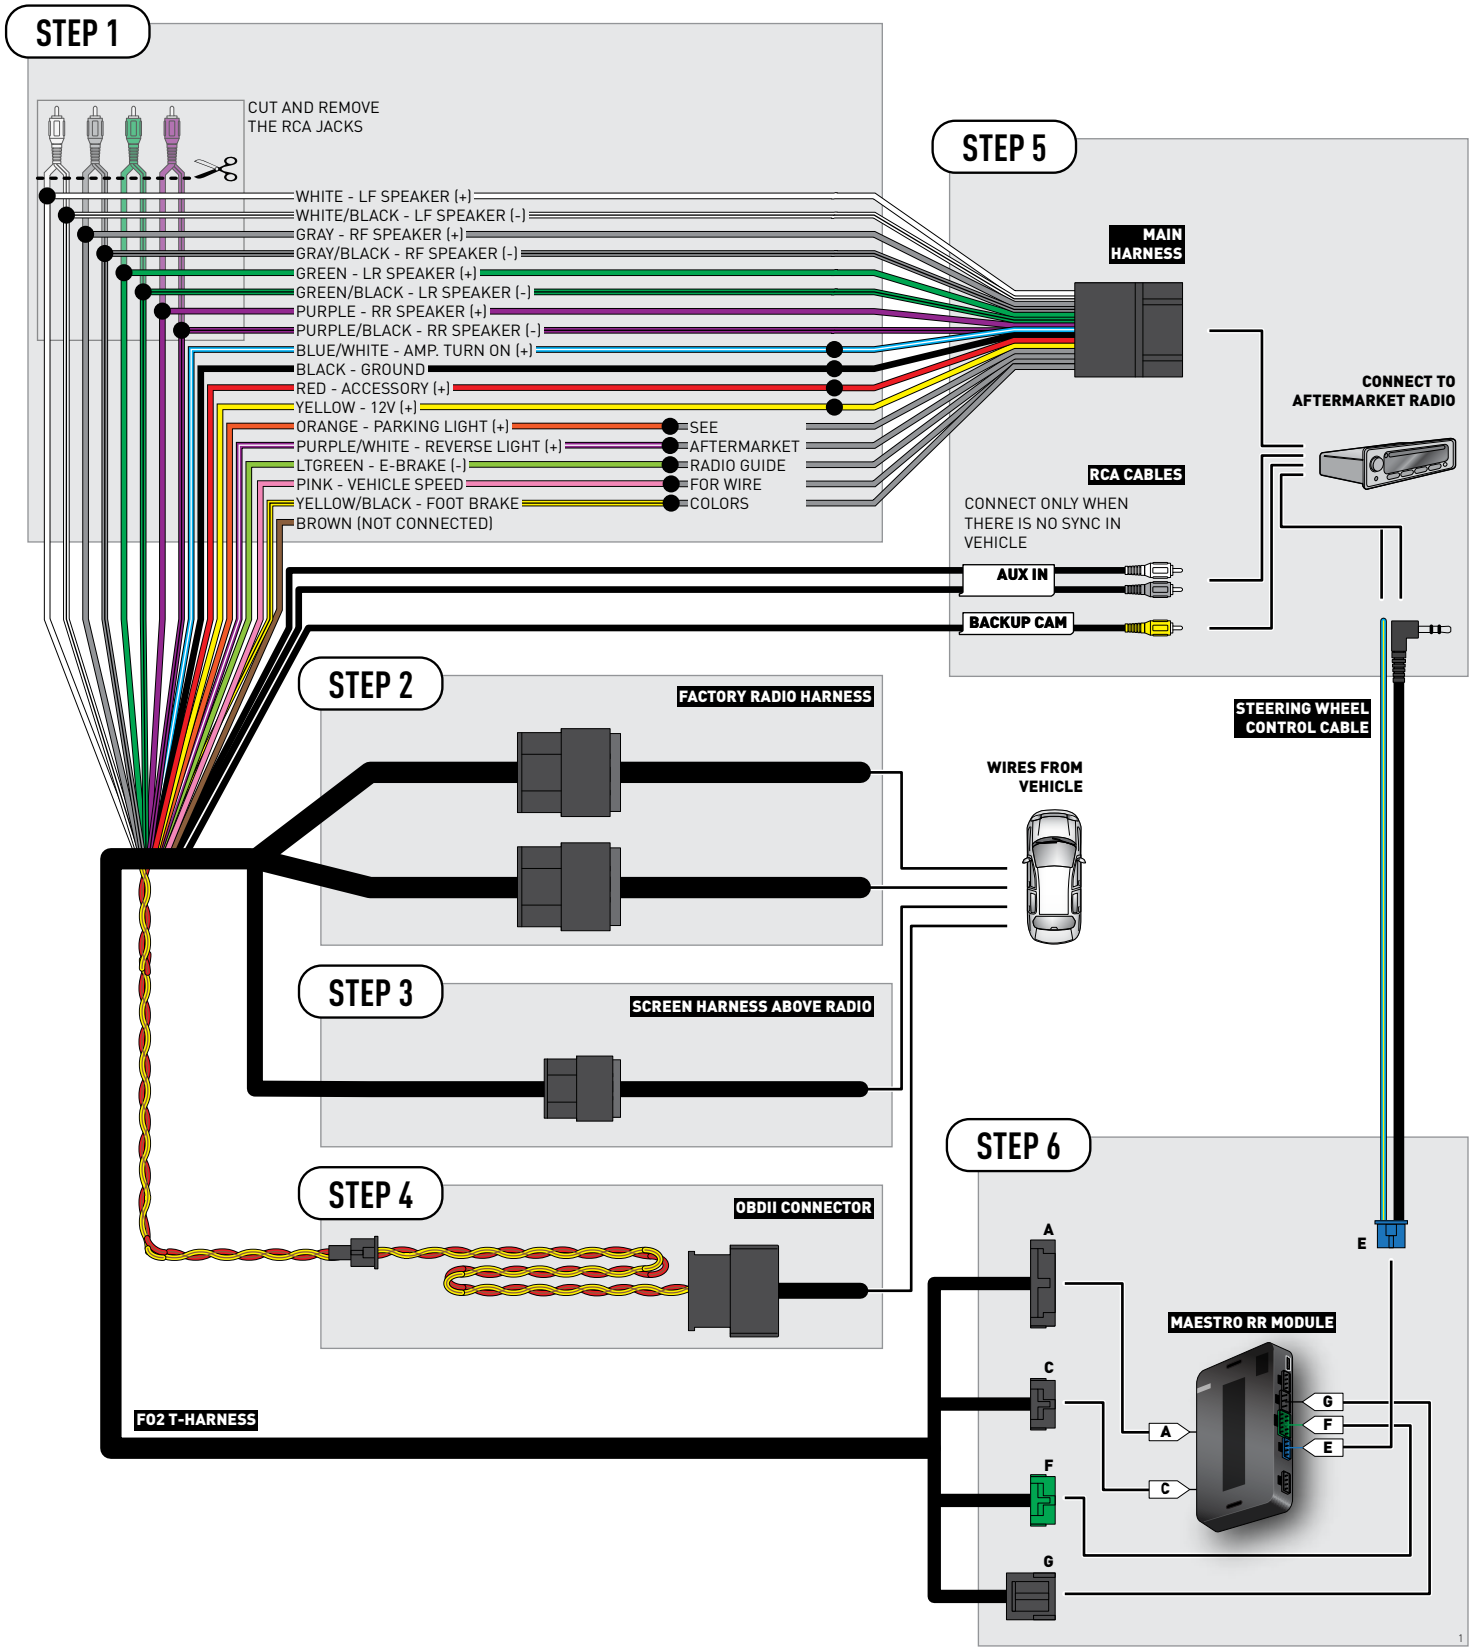

RADIO WIRE REFERENCE CHART

Wire Description	Polarity	Wire Color on Maestro T-Harness	Wire Color on Alpine cable	Wire Color on Kenwood cable	Wire Color on Pioneer cable
Illumination	(+)	Orange	N/A	Orange/White	Orange/White
Reverse Light	(+)	Purple/White	Orange/White	Purple/White	Purple/White
E-Brake	(-)	Lt Green	Yellow/Blue	Lt Green	Lt Green
Foot Brake	(+)	Yellow/Black	Yellow/Black	N/A	N/A
VSS (vehicle speed sensor)	(DATA)	Pink	Green/White	N/A	Pink